



## **BG01 Bluetooth Audio Sunglasses User Manuel**

Thank you for using our products! In order use this product properly and get the best experience.

Please read the Manual thoroughly before using it.

The content of this user manual may change due to the product performance and will not make further notice.

### **Refer to instruction for use**

**Please read and keep all safety, security and use instructions.**

Product model: BG01 open type audio Bluetooth glasses.

This product is a stereo Bluetooth glasses, easy to operate, beautiful and practical, easy to carry.

### **Made and design in China**

#### **1. Product parameters. Features**


- 1) Frame color: black;  
Lens color: black.
- 2) Frame material: nylon;  
Lens material: nylon or PC+ABS.
- 3) Bluetooth 5.0.
- 4) Charging time: 2 hours.
- 5) Talk time: 6 hours.
- 6) Music playback: 6 hours.
- 7) Standby time: 15 days (with Bluetooth connected).
- 8) Battery capacity: 120mAh\*2.
- 9) Charging current: DC5V, 200mA.
- 10) Channel: dual speakers, stereo.
- 11) Left and right dual speakers, directional playback, true stereo sound effect.



## 2. Product Accessories

- 1) Glasses.
- 2) USB cable.
- 3) Glasses cloth and case.
- 4) User Manuel.
- 5) Warranty card.

## 3. Operating instructions

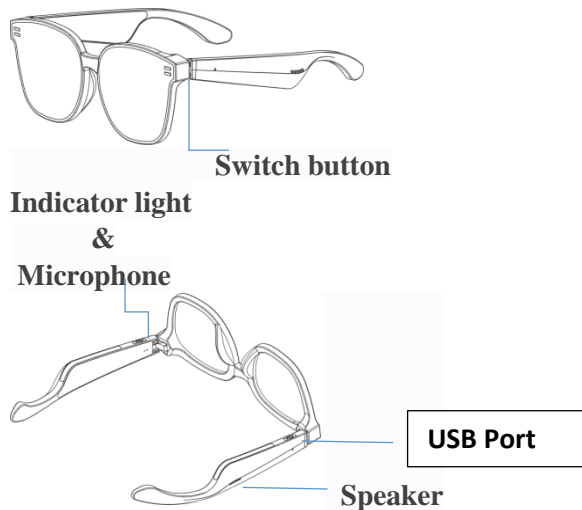

- Power on/off
  - 1) Turn on the glasses by open up glasses legs.  
The status light glows for 5 seconds then glows according to Bluetooth connection status.  
A voice prompt announces battery level.
  - 2) Turn off the glasses by close up glasses legs.  
The status light glows for 1 seconds and a voice prompt announces power off
  - 3) Auto off conserves the battery when the frames are not being used. When glasses disconnected with any device after 10 mins. A voice prompt announces power off.
  - 4) Forced shutdown by click switch button five times.
- Bluetooth connection
  - 1) First time pairing, turn on the glasses pairing after 5 second, a voice prompt announces ready for pairing. Indicator light slowly blinking.
  - 2) Click switch button for four time then hold it for 10 second to remove paring device, a voice prompt announces clear devices, indicator light fast bilk twice.
  - 3) A voice prompt announces “connecting” when glasses trying to searching device, once connect with device, voice prompt announces connected. When it disconnected with device will prompt announces disconnected.
  - 4) No paring history will automatically becoming paring status. When there is a pairing record, glasses will atomically paring with last device.

- Volume functions.  
You can adjust the volume by using press volume control or by using the volume controls on your mobile device.  
Press and hold right side button until prompt of increase volume.  
Press and hold left side button until prompt of lower volume.
- Media playback function
  - 1) Next song: triple click right side button.
  - 2) Last song: triple click left side button.
  - 3) Play/Pause: single click right or left side button.
- Call function
  - 1) Coming call notification with bilking indicator light and a voice prompt announces coming calls phone number.
  - 2) Answer a call: press right or left side button once.
  - 3) End a call: press right or left side button once.
  - 4) Decline an incoming call: press right or left side button twice.
  - 5) Answer a second incoming call and put the current call: click power button twice.
  - 6) Answer a second incoming call and hang up current call: press right or left side button once.
  - 7) During a call, double click right or left side button to switch call from glasses to phone device.
- Battery
  - 1) Low battery indication: a voice prompt announces low battery for every 30 seconds. Indicator light blink once for every 30 seconds.
  - 2) Low battery power off: a voice prompt announces low battery and going to power off, indicator light on for 5 seconds.
  - 3) When charging. The indicator light flashes regularly. Charge complete. The indicator light will stay on.
  - 4) Find out battery level via phone devices (need install phone app).
  - 5) Caution  
When glasses exceeded temperature range of 45 degree, the indicator light will fast flashes 3 times that indicating charging cannot be performed.  
Note: indicator light will flashes once at any order operations.
- **Attention**
  - 1) Please read this user Manuel carefully before use product.
  - 2) Please fully charge glasses before first time using.
  - 3) If product is not charged more than two weeks. Please recharge it before use.

- 4) Don't wipe the dirty lens directly. Wet the lens first, then dry it with the glasses cloth. Try to use suede and absorbent glasses to wipe gently, wipe glasses in the same direction.

● **Warning** 

- 1) Before using this device, please read all the safety guideline and follow all instructions to ensure correct and safe use.
- 2) Only use attachments/accessories specified by the manufacturer. Otherwise may cause fire, explosion, or other hazard.
- 3) Do not dismantle or repair this product, it may cause fire, shock hazard or complete damage the product.
- 4) Please use the device within the temperature range of 0°C~35°C, and store the device within the temperature range of -20°C~45°C. Either temperature is too low or too high, could cause equipment failure.
- 5) Unplug charger after charging. Do not charge over 12 hours.
- 6) To reduce the risk of fire or electrical shock, do NOT expose this product under rain, liquids or moisture.
- 7) Please do not throw the product into household garbage. Improper disposal may cause to catch fire and explode. Please follow the local regulations to dispose of this product and other accessories.
- 8) This product has a built-in non-removable lithium battery. Avoid any disassembled, impacted, squeezed, or thrown into fire. If there is serious expansion, do not use it immediately.
- 9) Do not short-circuit the charging metal contacts, which will cause the danger of short circuit and avoid overheating of the battery, and cause personal injury.
- 10) Do not throw this product or battery into fire, otherwise it may cause fire or explosion.
- 11) Do not expose products containing batteries to excessive heat (e.g. from storage in direct sunlight, fire or the like).
- 12) Do not explore the glasses in the sun for a long time, it can cause deformed, aging and broken.
- 13) Please follow the laws and regulations, do not use in the following environment:  
For those place has flammable and explosive oil, gas or chemicals related warehouse.  
Do not use this device in hospital operating room, emergency room, intensive care unit, etc. In order to avoid interference with the operation of medical instruments, please keep over 15cm safety distances from cardiac pacemakers, pedicure aids, cochlear implants and other medical equipment.

If you want to use this equipment near personal medical equipment, please consult your physician.

Please observe all safety warnings and regulations regarding the use of this device while driving.

·Do not use it outdoors to avoid lightning strikes during thunderstorms.

Do not use the charger in places with high humidity, such as bathrooms, otherwise it may cause electric shock, personal injury, fire and damage to the charger.



To avoid hearing loss, do not use high volume for long periods of time.

## • Customer services

Manufacturer: Shenzhen Falin Technology Co., Ltd.

Address:

Factory: Xiaolin Electronics Co., Ltd.

Contact us:



## Quick start

Order	Function	prompt
Power on	Open up glasses leg	Welcome, remain battery is
Power off	Close glasses leg	Power off
Answer call	Single click right/left button	du
Hang up call	Single click right/left button	du
Reject call	Double click right/left button	du du
Play / Pause	Single click right/left button	du
Volume up	Hold on right button	na na
Volume down	Hold on left button	na na
Last song	Triple click left button	du du du
Next song	Triple click right button	du du du
Start voice assistant	Double click right/left button	du du

Exit voice assistant	Double click right/left button	du du
Phone pairing		Ready to paring
Clear pairing history	Click and hold right/left button four times	Connected
charging		Light blink regularly
Battery full		Light keep on